

Pulsarlube BT App [General Guidance]

Getting Started

Pulsarlube BT App & Server admin access is available after signing up in the App. The admin must create secondary user accounts at https://bt.pulsarlube.com in order for accounts to have shared access to the same lubricators. *Lubricator access cannot be shared between multiple admin accounts created via the App.

- To sign up, open the App and tap Sign up.

- To log in, enter email address and password. Then select either **General [Manage BT]** or **Registration [Register BT]** to start. Lubricators will need to be registered in **Registration** before being able to manage them in **General**.

- General [Manage BT] to control, check, or modify settings of registered lubricators
 Only accounts with General access can control, check, and modify settings of registered lubricators.
 - You are unable to register or unregister lubricators in General.
- Registration [Register BT] to pair unregistered lubricators to the account
 - Only accounts with Registration access can pair and unpair lubricators.
 - You are unable to control, check, or modify any lubricator settings in Registration.





Admin accounts will automatically have access to both **General** and **Registration**. When creating secondary accounts, admins can limit secondary account access to either **General** or **Registration**, or grant access to both.



Pulsarlube BT App [General Guidance]

Settings





Pulsarlube BT App [Registration Access]



Register Lubricators

Layout & Features

- Select lubricators and tap **Register.** If lubricators are not showing up in the App, make sure a battery pack is installed in BT lubricator(s) and tap **Rescan.**

Select All Register BTCAA063 Q BTCAA063 Q Select All BTCAA063 Select All BTCAA063 Select All BTCAA063 Select All BTCAA063 Select All	Register O
BTCAA063 Q BTCAA063 BTCAA063	O,
BTCAA1DF STCAA1DF STCAA1DF BTCAA1DF	Q,
BTCAD09A C Register(2)	~
BTCAD1DF Q BTCAD1DF Q	Q
BTCAD09A	Q



Pulsarlube BT App [Registration Access]

Unregister Lubricators

- Hold lubricator ID for 3 seconds to unregister
- Tap Confirm on pop-up menu



Exit from Registration Mode

- Tap Logout
- Tap Logout on pop-up menu





Pulsarlube BT App [General Access]

Layout & Features





Pulsarlube BT App [General Access_Naming Lubricators]

Set Lubricator Name

- Select lubricator ID and tap Rename



Change Lubricator Name

- Hold lubricator name for 3 seconds and tap Change name







Pulsarlube BT App [General Access_Managing Lubricators]

Check Lubricator Status

- Tap the arrow icon to see lubricator status and details





- Tap BT lubricator operation settings to manage settings





Pulsarlube BT App [General Access_Grouping Lubricators]

Create Groups

- Tap +Add Group. Create a password to prevent unauthorized access.



Puls	sarlube BT				
Enter a group name					
Enter a new group nam	e				
Enter password					
Password (4 digits)					
Password re-type (4 digits)					
Cancel	Confirm				

- If the password is not entered for creation of a group, the group lock is unavailable so the lock icon does not appear. The lubricator status and details are also shared among customer employees.





Pulsarlube BT App [General Access_Grouping Lubricators]

Add Lubricators to Existing Groups

- Select lubricators, select group, then tap +Add Group.

@ FÿL/ARLUBE	•	@ Fülfarlu	BE 💮	© Pülsar	LUBE 🐵	© PÿL/A	RLUBE 🛞
+Add Group Deselec	AI	+Add Group	Deselect All	+Add Group	Deselect All	+Add Group	Deselect All
BTCAA056 Rename	>	BTCAA056	Rename >	втсаао	Rename >	BTCAA056	Rename >
BTCAA05B BTCAA05B	>	BTCAA05B BTCAA05B	>	BTCAA05B BTCAA05B	>	BTCAA05B BTCAA05B	>
MOTOR 01-1 BTCAA063		MOTOR 01-1 BTCAA063	>	MOTOR 01-1 BTCAA063	>	FACTORY 1(2)	_ ~
MOTOR 01-2 BTCAD1E7	>	MOTOR 01-2 BTCAD1E7	>	MOTOR 01-2 BTCAD1E7	>	MOTOR 01-1 BTCAA063	>
FACTORY 1(0)	~	FACTORY 1(0)	~	FACTORY 1(0)	_ ~	MOTOR 01-2 BTCAD1E7	>
FACTORY 2(1)	~	FACTORY 2(1)	~	FACTORY 2(1)	~	FACTORY 2(1)	
MOTOR 01-3 BTCAD1DF	>	MOTOR 01-3 BTCAD1DF	>	MOTOR 01-3 BTCAD1DF	>	MOTOR 01-3 BTCAD1DF	>

Edit Group Settings

- Press and hold group name for 3 seconds. Group settings can be modified only by authorized users after entering password. Admin accounts can change and control group functions without a password.



