

## Pulsarlube BT App [General Guidance]


## Getting Started


Pulsarlube BT App & Server admin access is available after signing up in the App. The admin must create secondary user accounts at https://bt.pulsarlube.com in order for accounts to have shared access to the same lubricators. \*Lubricator access cannot be shared between multiple admin accounts created via the App.

- To sign up, open the App and tap Sign up.

- To log in, enter email address and password. Then select either **General [Manage BT]** or **Registration [Register BT]** to start. Lubricators will need to be registered in **Registration** before being able to manage them in **General**.

- General [Manage BT] to control, check, or modify settings of registered lubricators
   Only accounts with General access can control, check, and modify settings of registered lubricators.
  - You are unable to register or unregister lubricators in General.
- Registration [Register BT] to pair unregistered lubricators to the account
  - Only accounts with Registration access can pair and unpair lubricators.
  - You are unable to control, check, or modify any lubricator settings in Registration.

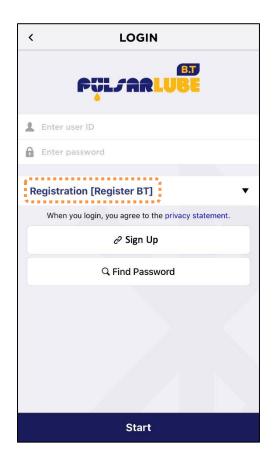

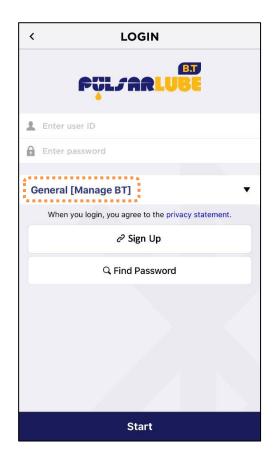

Admin accounts will automatically have access to both **General** and **Registration**. When creating secondary accounts, admins can limit secondary account access to either **General** or **Registration**, or grant access to both.



# Pulsarlube BT App [General Guidance]


## Settings

<	Settings	
	test11 test11@pulsarlube.com	
Data ba	ackup	
ጭ	Backup data	<b>0</b> —
Custon	mer Service	
ç	Customer Service	<u> </u>
Setting	gs	
Δ	Lubricator update notification settings	5day(s)
\$	Notice	>
()	Version	>
	Pulsarlube BT manual	0—
	Pulsarlube BT App manual	<u> </u>
ネ	Change language	<b>0</b> —
≙	Logout	<b>—</b>



## Pulsarlube BT App [Registration Access]

### Layout & Features

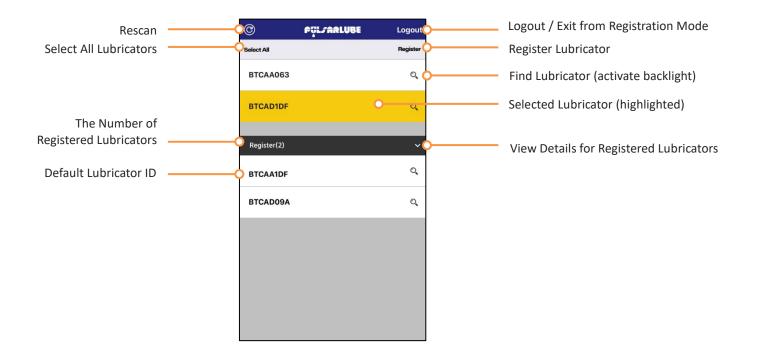

### Register Lubricators

- Select lubricators and tap **Register.** If lubricators are not showing up in the App, make sure a battery pack is installed in BT lubricator(s) and tap **Rescan.** 

©	PÇL/ARLUBE	Logout	©	FÇLJARLUBE	Logout		©	PÇL/ARLUBE	Logout
Select All		Register	Select All		Register		Select All		Register
BTCAA063		Q	BTCAA063		0,		BTCAA063		Q,
BTCAA1DF		Q	BTCAA1DF		0		BTCAD1DF		Q
BTCAD09A	<b>E</b>	Q	BTCAD09A		Q,	>	Register(2)		~
BTCAD1DF		Q	BTCAD1DF		Q,		BTCAA1DF		Q
							BTCAD09A		Q




## Pulsarlube BT App [Registration Access]

### Unregister Lubricators

#### - Swipe left to delete

- Tap Confirm on pop-up menu

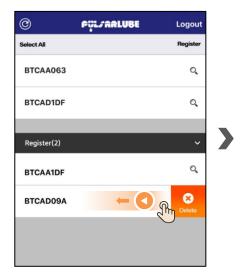


)		
Pulsarl	ube BT	
Want to cance	el registration?	
Cancel	Coalim	
0	Ŭ	

©	Fül/ARLUBE	Logout
Select All		Register
BTCAA063		Q
BTCAD1DF		٩
BTCAD09A		Q
Register(1)		~
BTCAA1DF		Q,

### Exit from Registration Mode

#### - Tap Logout

- Tap Yes on pop-up menu

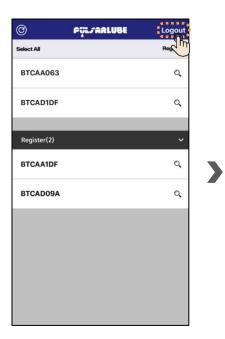






## Pulsarlube BT App [General Access]

#### Layout & Features

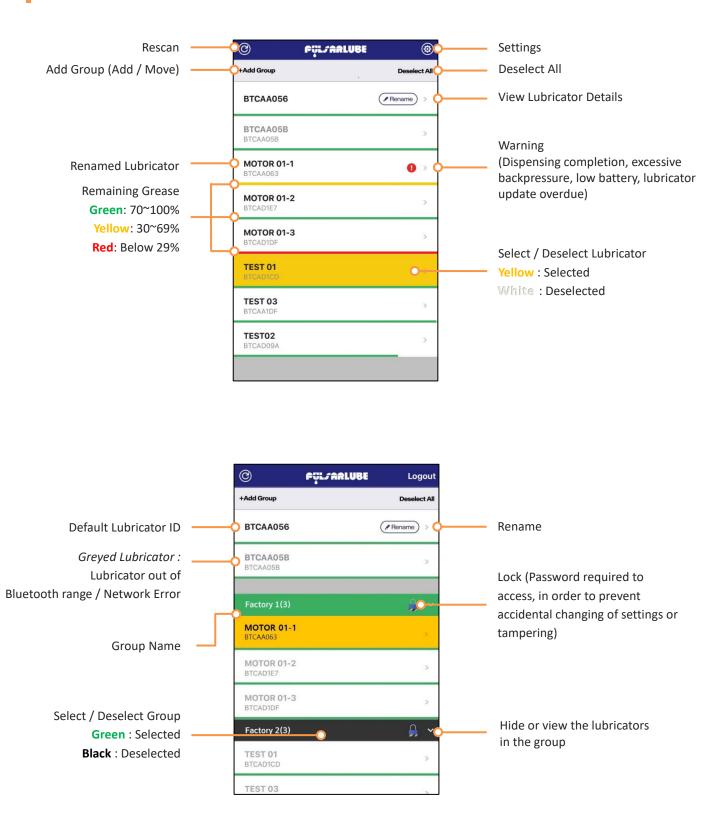




## Pulsarlube BT App [General Access\_Naming Lubricators]

### Set Lubricator Name


- Select lubricator ID and tap Rename

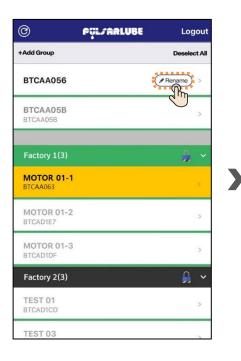



## Change Lubricator Name

- Swipe left and select Rename

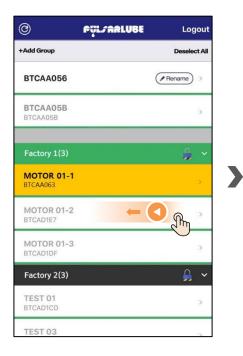

©	FÿL/ARLUBE	Logout
+Add Group		Deselect All
BTCAA056		Rename >
BTCAA05B BTCAA05B		>
Factory 1(3)		<b>_</b> ~
MOTOR 01-1 BTCAA063		
MOTOR 01-2 BTCAD1E7		Rename Relate
MOTOR 01-3 BTCAD1DF		>
Factory 2(3)		🔒 🗸
TEST 01 BTCAD1CD		>
TEST 03 BTCAA1DF		>







## Pulsarlube BT App [General Access\_Managing Lubricators]

### Check Lubricator Status

- Tap the arrow icon to see lubricator status and details

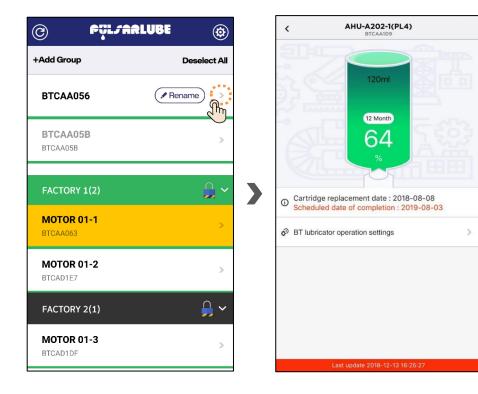

- Tap BT lubricator operation settings to manage settings

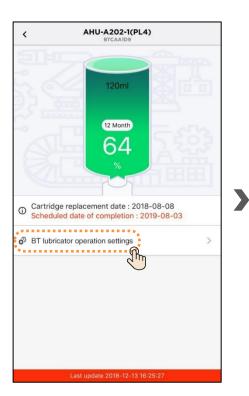

Change di	spensing period		Salast Crosse Turne
D PL1		0	Select Grease Type — (PL1 ~ PL20 and/or enter custom grease
💆 12 I	Month	0	Select Dispensing Period (1 ~ 12 months)
	₩ Purge	•	Purge Grease (6 pump cycles will dispense. To cancel, press PURGE button on lubricator.)
	Q Find lubricator	0	<ul> <li>Find Lubricator</li> <li>(LCD backlight blinks when found)</li> </ul>





## Pulsarlube BT App [General Access\_Grouping Lubricators]


### Create Groups

- Tap +Add Group. Create a password to prevent unauthorized access.

©	₽ÿLJARLUBE	۲
+Add Group		Deselect All
BTCAA056		Rename >
BTCAA05B BTCAA05B		>
MOTOR 01-1 BTCAA063		>
MOTOR 01-2 BTCAD1E7		>
MOTOR 01-3 BTCAD1DF		>
TEST 01 BTCAD1CD		>
TEST 03 BTCAA1DF		>
TEST02 BTCAD09A		>

Pulsa	arlube BT		
Enter a grou	p name		
Enter a group name			
Enter password			
Password (4 digits)			
Password re	e-type (4 digits)		
Cancel	Confirm		

- If the password is not entered for creation of a group, the group lock is unavailable so the lock icon does not appear. The lubricator status and details are also shared among customer employees.

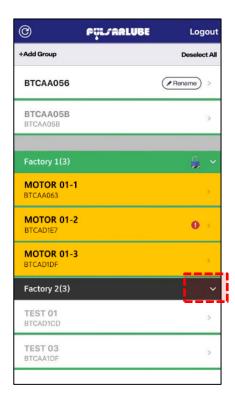




## Pulsarlube BT App [General Access\_Grouping Lubricators]

### Add Lubricators to Existing Groups

- Select lubricators, select group, then tap +Add Group.

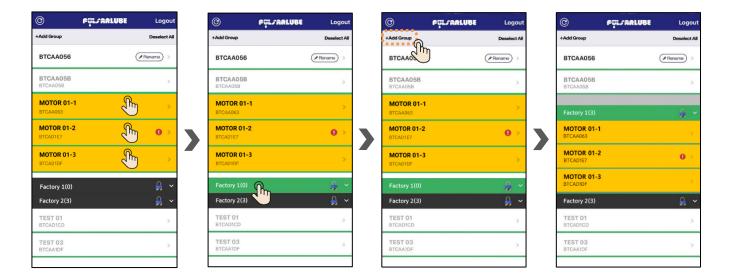

### Edit Group Settings

- Press and hold group name for 3 seconds. Group settings can be modified only by authorized users after entering password. Admin accounts can change and control group functions without a password.

